


















 

 





 
 

 















Originale		Sostituto		Originale		Sostituto	
	Standby		Power		2		2
	Mute		Mute / Dimmer		3		3
	Play		Play / Slow		4		4
	Pause		Pause / Step / Freeze		5		5
	Stop		Stop / Hold		6		6
	Mem		Rec / Rec Mode		7		7
	<< Scan		<< / Tune-		8		8
	Scan >>		>> / Tune+		9		9
	I<< Preset		I<< / Preset-		0		0
	Preset >>I		>>I / Preset+		REP/--		Green / APP / Repeat
	Open/Close		Eject / Surround		Speakers A/B		Yellow / YouTube / Repeat
	Auto (Tuner)		TV/Radio /		Dimmer		Shift + Mute / Dimmer
	Input		AV / Input / RDS		<< Scan		Shift + << /
	Info		Info / Angle		Scan >>		Shift + >> /
	Vol+		Vol+		I<< Preset		Shift + I<< / Preset-
	Vol-		Vol-		>>I Preset		Shift + >>I / Preset+
	1		1		FM/AM (Tuner)		Shift + 6





Originale	Sostituto
Open/Close	Eject / Surround
Input	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Dimmer	Shift + Mute / Dimmer
REP/--	Green / APP / Repeat
Play	Play / Slow
Pause/Auto	Pause / Step / Freeze
Stop/FM/AM	Stop / Hold

Originale	Sostituto
Mem	Rec / Rec Mode
<< Scan	<< / Tune-
Scan >>	>> / Tune+
Mute	Mute / Dimmer
I<< Preset	I<< / Preset-
Preset >>I	>>I / Preset+
Vol+	Vol+
Vol-	Vol-
Standby	Power
Info	Info / Angle
Speakers A/B	Yellow / YouTube / Repeat

