 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red / SUB	 Subtitle / EQ
 Red / SUB	 Red / Netflix / Search
 Green / Lang	 Audio / Lang I/II
 Green / Lang	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue / TXT	 Blue / Prime Video / Random
 Blue / TXT	 Text / Goto
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode

Originale	Sostituto
 Rec List	 Smart / List
 Media USB	 Display / Media
 TV / RAD	 TV/Radio /
 Timer	 Sleep / Timer
 Menu	 Menu / Home
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up
 Down / CH-	 CH- / Page-
 Down / CH-	 Down
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 OK	 OK
 Back	 Back / Return





Originale	Sostituto
HDMI RES	D.Menu / Top
EPG	Guide / EPG / -/-
Page+	Shift + CH+ /
Ratio	Picture / Format
FAV	Fav / Marker / PC
Page-	Shift + CH- /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
SOS	Sound / Title
0	0

Originale	Sostituto

