


 


























 







 

 




Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	Menu Down	 Down
Mute	 Mute / Dimmer	Back	 Back / Return
East	 Rec / Rec Mode	Volume+	 Vol+
West	 I<< / Preset-	View	 Smart / List
Audio	 Audio / Lang I/II	CH/Page+	 CH+ / Page+
Subt.List	 Subtitle / EQ	Volume-	 Vol-
Zoom	 Zoom / Size	Display	 Display / Media
Sleep Timer	 Sleep / Timer	CH/Page-	 CH- / Page-
TV	 TV/Radio /	1. ?	 1
Help	 D.Menu / Top	2abc	 2
Text	 Text / Goto	3def	 3
Video	 AV / Input / RDS	4ghi	 4
Menu	 Menu / Home	5jkl	 5
Menu Up	 Up	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9



Originale	Sostituto	Originale	Sostituto
Guide Pilote	 Guide / EPG / -/--		
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
TV	 Shift + 1		
Video	 Shift + 4		

