

 

 



 

 


 

 


 



 

 








Originale	Sostituto
	 Power
	 Audio / Lang I/II
	 Mute / Dimmer
	 TV/Radio /
	 Subtitle / EQ
	 Guide / EPG / -/--
	 Text / Goto
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Fav / Marker / PC

Originale	Sostituto
	 0
	 Back / Return
	 Menu / Home
	 Exit / Cancel / Clear
	 Up
	 CH+ / Page+
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Info / Angle
	 CH- / Page-
	 Down
	 Smart / List
	 Display / Media
	 Shift + 8





Originale	Sostituto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Red	 Red / Netflix / Search
 I<<	 I<< / Preset-
 Yellow	 Yellow / YouTube / Repeat
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Green	 Green / APP / Repeat
 <<	 << / Tune-
 >>	 >> / Tune+
 Blue	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode

Originale	Sostituto

