

 
 


 

 
 


 
 

 

 

 

 


 


 





 
 





 


 

 



 



 
 






 
 

 
 
 
 
 
 










Originale		Sostituto		Originale		Sostituto	
	Power		Power		Text		Text
	Mute		Mute		FAV		Pre Ch
	TV/SAT		AV		P-		Ch -
	SAT		Smart		P+		Ch +
	TV		Media		Info		Info
	Radio		TV/R		Up		Up
	Recall		Back		Left		Left
	1		1		OK		Ok
	2		2		OK		Shift + Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Menu		Menu
	6		6		Exit		Exit
	7		7		Red / Lang		Red
	8		8		Red / Lang		Dual
	9		9		Green / Pause		Green
	0		0		Green / Pause		Pause





Originale		Sostituto		Originale		Sostituto	
 SOUND	Yellow / Sound	 C	Yellow				
 SOUND	Yellow / Sound	 SHIFT +  SOUND DUAL	Shift + Dual				
 EPG	Blue / EPG	 D	Blue				
 EPG	Blue / EPG	 GUIDE	Guide				

