




 
 


 
 
 
 
 

 
 
 
 

 




 


 


 
 

 
 

 
 
 
 
 
 
 



 

 

 




 
 
 
 

 



 



 

 
 
 

 


	Originale	Sostituto		Originale	Sostituto
	Power		Power		Exit
	Mute		Mute		Up
	Rec List		Smart		Down
	CH/List		Media		Right
	Subtitle		Subt		Left
	Repeat	 + 	Shift + Text		Ok
	Rec		Rec		1
	Stop		Stop		2
	I<<		I<<		3
	>>I		>>I		4
	Pause		Pause		5
	Play		Play		6
	<<		<<		7
	>>		>>		8
	Input		AV		9
	Display		Info		0
	Menu		Menu		Recall
					Back





Originale	Sostituto
 FAV	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Picture	 Shift + Format
 Epg	 Guide
 Sound	 Dual
 Sleep	 Sleep
 Ch+	 Ch +
 Ch-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Tv/Txt	 Text
 Cancel	 Eject
 Reveal	 3D
 Nicam/A2	 Options

Originale	Sostituto
 Size	 Format
 Hold	 TV/R
 Subpage	 D. Menu
 Index	 List

