




 



 



 



























 

 

 











 

 

 










Originale	Sostituto
 POWER	 Power
 SOURCE	 AV
 EXIT	 Exit
 MENU	 Menu
 AUDIO	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 MUTE	 Mute

Originale	Sostituto
 PIC MODE	 Shift + Format
 TEXT	 Text
 TV / RADIO	 TV/R
 OK	 Ok
 UP / CH+	 Up
 DOWN / CH-	 Down
 RIGHT	 Right
 LEFT	 Left
 PAGE UP	 Ch +
 PAGE DOWN	 Ch -
 VOL+	 Vol +
 VOL-	 Vol -
 SLEEP	 Sleep
 SUB.	 Subt
 RECALL	 Back
 RED	 Red
 GREEN	 Green





Originale		Sostituto		Originale	Sostituto
	YELLOW		Yellow		
	BLUE		Blue		
	STOP		Stop		
	PAUSE		Pause		
	REC		Rec		
	REW		<<		
	PLAY		Play		
	FWD		>>		
	SAT		Smart		
	EPG		Guide		
	HELP		D. Menu		
	V. FORMAT		Format		
	INFO		Info		
	T / S		List		
	POS.		Media		

