









 





 
 

 

 

 

 





 





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 I/II	 Audio / Lang I/II
 PR+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 Input	 AV / Input / RDS
 PR-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Favourite	 Fav / Marker / PC
 FAV-	 Shift + CH- /
 FAV+	 Shift + CH+ /
 Info	 Info / Angle
 P-Mode	 Picture / Format
 S-Mode	 Sound / Title
 ARC	 Display / Media























 










	Originale	Sostituto	
	EPG	Guide / EPG / -/--	
	Text	Text / Goto	
	Mix	+ Shift + Text /	
	Size	Zoom / Size	
	Reveal	D.Menu / Top	
	Hold	Stop / Hold	
	Index	Smart / List	
	S.Page	Eject / Surround	
	S.TITL	Subtitle / EQ	
	Red	Red / Netflix / Search	
	Green	Green / APP / Repeat	
	Yellow	Yellow / YouTube / Repeat	
	Blue	Blue / Prime Video / Random	

Originale	Sostituto





Originale	Sostituto	
Update	 + 	Shift + D.Menu / Top Menu
Aft/Caf	 + 	Shift + AV / Input / RDS
Reveal		Setup / OPT /
Off/Tim		Eject / Surround
Game Coo		Smart / List
2.Fav P/C 2.		Fav / Marker / PC
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--

Originale	Sostituto	
0/10		0
Menu audio		Audio / Lang I/II
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Color- S.Std		Sound / Title
Audio+	 + 	Shift + Vol+
Tune-		<< / Tune-
Tune+		>> / Tune+
Menu		Menu / Home
Mute		Mute / Dimmer
Info		Info / Angle
Subt.List		Subtitle / EQ
Txt Stop		Stop / Hold
Sleep Timer		Sleep / Timer





Originale	Sostituto	
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Txt Expand		Zoom / Size
TV/AV		AV / Input / RDS
On/Off		Power
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-

Originale	Sostituto

