 



 

 

 

 

 





 



 



 
 





 




Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-







 



 



 

 

 

 

















 





 

 



 

 

 

 

 













Originale	Sostituto
Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow / I<<	I<< / Preset-
Yellow / I<<	Yellow / YouTube / Repeat
Blue / >>I	Blue / Prime Video / Random
Blue / >>I	>>I / Preset+
Text / Play/Pause	Text / Goto
Text / Play/Pause	Pause / Step / Freeze
Text / Play/Pause	Play / Slow
Stop / Still	Stop / Hold
Timer / Subtitle	Subtitle / EQ
Size / Aspect	Zoom / Size
Cancel [=X]	+ Shift + Exit / Cancel / Clear
Radio	TV/Radio /
Audio / I/II	Audio / Lang I/II
Rec	Rec / Rec Mode

Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





	Originale	Sostituto	Originale	Sostituto
	Green	Green / APP / Repeat		
	>>	>> / Tune+		
	Yellow	Yellow / YouTube / Repeat		
	l<<	l<< / Preset-		
	Blue	Blue / Prime Video / Random		
	>>	>> / Preset+		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	[≡]	Text / Goto		
	Stop/Still	Stop / Hold		
	[≡+]	Picture / Format		
	[≡o]/Subtitle	Subtitle / EQ		
	[≡◆]/[+]	Zoom / Size		
	[≡x]	Setup / OPT /		
	Radio	TV/Radio /		
	Audio	Audio / Lang I/II		
	Rec	Rec / Rec Mode		

