



Originale	Sostituto
 Power	 Power
 Mute	 Mute
 ?/Help	 Smart
 []/Tv Format	 Format
 [^]/Tv/Radio	 TV/R
 */Mode	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu

Originale	Sostituto
 Recall	 Back
 <<	 <<
 Stop	 Stop
 Play/Pause	 Play
 >>	 >>
 Rec	 Rec
 Exit	 Exit
 i/Info	 Info
 EPG	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 >>I/Next	 >>I
 I<</Prev	 I<<
 I>/Slow	 Pause



