 

 







 

 

 

 



 

 

 

 

 





 








 
 


 


Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 [=]	 Text / Goto
 [...]	 Subtitle / EQ
 Home	 Shift + Menu /
 End	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 <	 I<< / Preset-
 0	 0

Originale	Sostituto
 >	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol+	 Vol+
 Exit	 Exit / Cancel / Clear
 Channel+	 CH+ / Page+
 Vol-	 Vol-
 EPG	 Guide / EPG / -/--
 Channel-	 CH- / Page-
 Menu	 Menu / Home





Originale	Sostituto
 [≡R]	 Eject / Surround
 Audio	 Audio / Lang I/II
 Help	 D.Menu / Top
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 TV	 Shift + 1
 TV	 TV/Radio /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Radio	 Shift + 6
 Radio	 Shift + TV/Radio / Program

Originale	Sostituto

