



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 [I]/Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Source	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 << / [≡o]	 << / Tune-	 Right	 Right
 >> / [≡?]	 >> / Tune+	 Down	 Down
 << / [≡+]	 << / Preset-	 EPG	 Guide / EPG / -/-
 >> / [≡..]	 >> / Preset+	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 FAV	 Fav / Marker / PC
 Stop	 Stop / Hold	 CH+	 CH+ / Page+
 [≡i]	 Smart / List	 Vol-	 Vol-
 Text	 Text / Goto	 REP/Rec	 Rec / Rec Mode
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Freeze	 Shift + Pause / Step / Freeze	 1	 1






















	Originale	Sostituto		Originale	Sostituto
	2	DVD 2			
	3	CD - STB 3			
	4	VIDEO 4			
	5	TAPE 5			
	6	TUNER 6			
	7	AUX - HDD 7			
	8	USB 8			
	9	BLUETOOTH 9			
	AUDIO	LANG I/II AUDIO			
	0	HDMI - SAT 0			
	RECALL	RETURN BACK			

	Originale	Sostituto		Originale	Sostituto





Originale	Sostituto
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<</Hold	 << / Tune-
>>/Index	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Nicam/A2	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
Subpage	 Eject / Surround
Size	 Zoom / Size
Sleep	 Sleep / Timer
DTV/Radio	 TV/Radio /
Reveal	 D.Menu / Top

Originale	Sostituto
TXT/MIX	 Text / Goto
Menu	 Menu / Home
Up	 Up
Info	 Info / Angle
Left	 Left
Enter	 OK
Right	 Right
Cancel	 Exit / Cancel / Clear
Down	 Down
Back	 Back / Return
Vol+	 Vol+
List	 Smart / List
CH+	 CH+ / Page+
Vol-	 Vol-
Mode	 Display / Media
CH-	 CH- / Page-
1	 1
















Originale	Sostituto	
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
EPG		Guide / EPG / -/--
0		0
FAV		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
<</Hold		Shift + Stop /
FAV-		Shift + Left

Originale	Sostituto	
FAV+		Shift + Right
-/--		Shift + Guide / EPG / -/--





Originale	Sostituto
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<</[Timer]	 << / Tune-
>>/[≡?]	 >> / Tune+
I<</[≡⇅]	 I<< / Preset-
>>I/[≡...]	 >>I / Preset+
Audio	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
I<</[≡⇅]	 Zoom / Size
<</[Timer]	 Sleep / Timer
Text	 Text / Goto
Source/Av	 AV / Input / RDS
[II]	 Menu / Home

Originale	Sostituto
Up	 Up
Info	 Info / Angle
Left	 Left
Ok	 OK
Right	 Right
Exit	 Exit / Cancel / Clear
Down	 Down
Recall	 Back / Return
Vol+	 Vol+
[≡i]	 Smart / List
Ch+	 CH+ / Page+
Vol-	 Vol-
Ch-	 CH- / Page-
1	 1
2	 2
3	 3
4	 4





Originale	Sostituto	Originale	Sostituto
5	5		
6	6		
7	7		
8	8		
9	9		
Epg	Guide / EPG / -/--		
0	0		
Fav	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Freeze	+ Shift + Pause / Step /		

