



Originale	Sostituto	Originale	Sostituto
Power	Power	Up/CH+	Up
Mute	Mute / Dimmer	Left	Left
Red/EPG	Red / Netflix / Search	Vol-	Vol-
Red/EPG	Guide / EPG / -/--	OK	OK
Tv/Radio	TV/Radio /	Right	Right
Pause	Pause / Step / Freeze	Vol+	Vol+
Green/Audio	Green / APP / Repeat	Down/CH-	Down
Green/Audio	Audio / Lang I/II	Menu	Menu / Home
Info	Info / Angle	Exit	Exit / Cancel / Clear
Recall	Back / Return	A-Z	Setup / OPT /
Yellow/Pg	Yellow / YouTube / Repeat	SAT	Shift + 0
Yellow/Pg	Sleep / Timer	FAV	Fav / Marker / PC
Yellow/Pg	Shift + CH+ /	1	1
TXT	Text / Goto	2	2
Blue/PgDw/Forma	Blue / Prime Video / Random	3	3
Blue/PgDw/Forma	Shift + CH- /	4	4
Blue/PgDw/Forma	Picture / Format	5	5

Originale	Sostituto	Originale	Sostituto
Up/CH+	Up	Left	Left
Vol-	Vol-	OK	OK
Right	Right	Vol+	Vol+
Down/CH-	Down	Menu	Menu / Home
Exit	Exit / Cancel / Clear	A-Z	Setup / OPT /
SAT	Shift + 0	FAV	Fav / Marker / PC
1	1	2	2
3	3	4	4
5	5		



t

Originale

Sostituto

Originale

Sostituto

	6		6		
	7		7		
	8		8		
	9		9		
	FAV+		CH+ / Page+		
	0		0		
	FAV-		CH- / Page-		

