










 

 

 


 
 
 
 


 
 


 

 

 



 


 
 



 

 
 
 
 
 




 



 


 




 
 
 
 
 
 

 
 
 

 


 
 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH+		Ch +
	Mute		Mute		CH-		Ch -
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Exit		Exit
	7		7		Menu		Menu
	8		8		Aspect		Format
	9		9		Sleep		Sleep
	0		0		Rec		Rec
	PR.List		List		Red/DVD Setup		Red
	Recall		Pre Ch		Green/Repeat		Green
	Source		AV		Yellow/Languag		Yellow
	Vol+		Vol +		Blue/DVD Menu		Blue
	Vol-		Vol -		Title/PC Auto		Media





Originale		Sostituto		Originale		Sostituto	
	Tv/Radio		TV/R		PIC.Mode		Shift + Format
	I-II/Audio		Dual		S.Mode		Shift + Dual
	Subtitle		Subt		Zoom		Shift + Eject
	Prog/Index		Options				
	Step/Freeze		Back				
	Text		Text				
	Info/Display		Info				
	Play/Size		Play				
	Pause/Subpage		Pause				
	Stop/Hold		Stop				
	I<<		I<<				
	>>I		>>I				
	<<		<<				
	>>		>>				
	Rec List		Guide				
	Open/Close		Eject				
	A-B/Reveal		D. Menu				

