



| Originale | Sostituto |
|---|---|
|  Standby |  Power |
|  Source |  AV / Input / RDS |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  P Mode |  Picture / Format |
|  S Mode |  Sound / Title |
|  Freeze |  Pause / Step / Freeze |
|  TXT |  Text / Goto |
|  Mix / Fav List |  Fav / Marker / PC |
|  Size / Subtitle |  Zoom / Size |
|  Cancel / Audio |  Shift + Exit / Cancel / Clear |
|  Record |  Rec / Rec Mode |
|  << / Index |  << / Tune- |
|  >> / Hold |  >> / Tune+ |
|  I<< / Reveal |  I<< / Preset- |

| Originale | Sostituto |
|--|---|
|  >>I / Subpage |  >>I / Preset+ |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Play/Pause / Timeshift |  Play / Slow |
|  Play/Pause / Timeshift |  Shift + Play / |
|  Down |  Down |
|  Stop / EPG |  Shift + Stop / |
|  Stop / EPG |  Stop / Hold |
|  Vol + |  Vol+ |
|  Mute |  Mute / Dimmer |
|  CH + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  TV / Radio |  TV/Radio / |



