


 



 





 


 





 
 

 

 

 








Originale	Sostituto
 Power	 Power
 Mute	 Mute
 [ <> ]	 Format
 ♪	 Dual
 [ ]	 3D
 PAT	 Smart
 PIP Sel	 Play
 PIP Pos	 Pause
 PIP Size	 Stop
 AV	 AV
 PC	 Media
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Originale	Sostituto
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Zoom	 Eject
 Swap	 Pre Ch
 Swap	 Back
 PR-	 Ch -
 PR+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Freeze	 Ok




**Originale**
**Sostituto**

	Info		Info
	Menu		Menu
	[+]		Options
	[?]		D. Menu
	[◆]		Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text / Mix		Text
	[≡x]		Exit
	[≡≡]		Guide

**Originale**
**Sostituto**