



 
 
 

 

 

 


 
 


 
 



 
 

 





 




Originale	Sostituto
 Power	 Power
 HDMI Control	 D. Menu
 Record	 Rec
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 I<<	 I<<
 <<	 <<
 >>	 >>
 >>I	 >>I
 Screen	 Format
 Lang	 Dual
 Subtitle	 Subt
 Internet	 Media
 Red/Zoom/↑	 Red
 Green/Repeat/↓	 Green
 Yellow / Root	 Yellow

Originale	Sostituto
 Blue / Title	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 Text
 Swap	 Pre Ch
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left



