







 





 



 




 






 











Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P+	 Up
 1	 1	 V-	 Vol-
 2	 2	 V-	 Left
 3	 3	 Menu	 Menu / Home
 4	 4	 Menu	 OK
 5	 5	 V+	 Vol+
 6	 6	 V+	 Right
 7	 7	 P-	 CH- / Page-
 8	 8	 P-	 Down
 9	 9	 Tv	 TV/Radio /
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 0	 0	 Av	 AV / Input / RDS
 16:9	 Picture / Format	 Red	 Red / Netflix / Search
 S/M/D	 Display / Media	 Green	 Green / APP / Repeat
 PP	 Back / Return	 Yellow	 Yellow / YouTube / Repeat
 →←	 Smart / List	 Blue	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 ≡Text	 Text / Goto

Originale	Sostituto	Originale	Sostituto
 P+	 Up	 TV	 DVD
 V-	 Left	 Exit	 SAT
 Menu	 Menu / Home	 Av	 AUX
 Menu	 OK	 Red	 REC MODE
 V+	 Vol+	 Green	 SLOW STEP-FREEZE
 V+	 Right	 Yellow	 HOLD
 P-	 CH- / Page-	 Blue	 PRESET-
 P-	 Down	 ≡Text	 PRESET+
 Tv	 TV/Radio /		 EQ SURROUND
 Exit	 Exit / Cancel / Clear		 TITLE LANG UI EQ
Av	AV / Input / RDS		SOUND AUDIO SUBTITLE
Red	Red / Netflix / Search		FORMAT SIZE TIMER PROGRAM
Green	Green / APP / Repeat		PICTURE ZOOM SLEEP
Yellow	Yellow / YouTube / Repeat		TOP MENU OPT-TOOLS GOTO
Blue	Blue / Prime Video / Random		D.MENU SETUP TEXT
≡Text	Text / Goto		TV RADIO



