


Originale	Sostituto	Originale	Sostituto
	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Prev.		I<< / Preset-
	PC		Shift + Fav / Marker / PC
	DTV		Shift + 2
	AV		Shift + 3

Originale	Sostituto	Originale	Sostituto
	TV		Shift + 1
	Still		Pause / Step / Freeze
	Favor		Fav / Marker / PC
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	Display		Display / Media
	Red / P.Mode		Picture / Format
	Red / P.Mode		Red / Netflix / Search
	Green / S.Mode		Shift + Sound / Title
	Green / S.Mode		Green / APP / Repeat
	Yellow / S.Effect		Sound / Title
	Yellow / S.Effect		Yellow / YouTube / Repeat
	Blue / Stereo		Audio / Lang I/II
	Blue / Stereo		Blue / Prime Video / Random
	Up / CH+		Up
	Up / CH+		CH+ / Page+

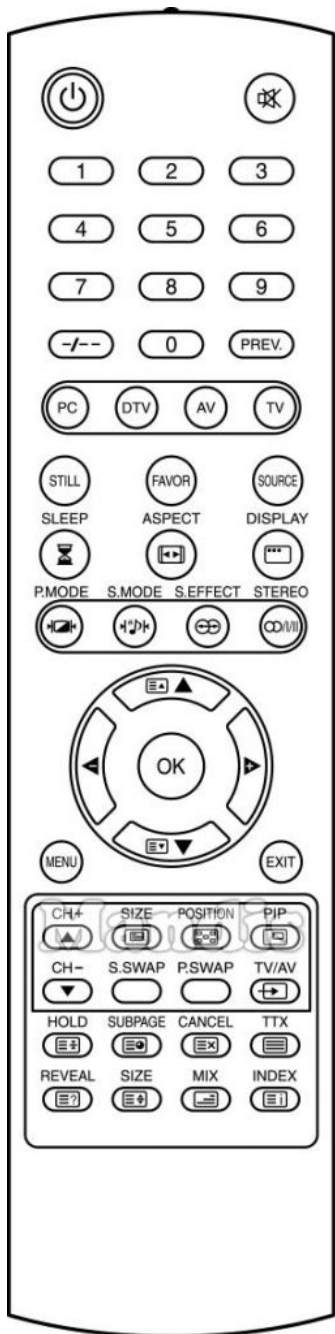



Originale	Sostituto
Left / Vol-	Left
Left / Vol-	Vol-
OK	OK
Right / Vol+	Vol+
Right / Vol+	Right
Menu	Menu / Home
Down / CH-	Down
Down / CH-	CH- / Page-
Exit	Exit / Cancel / Clear
PIP CH+	Shift + CH+ /
PIP Size	Shift + Red / Netflix /
PIP Position	Shift + Green / APP /
PIP	Smart / List
PIP CH-	Shift + CH- /
PIP S.Swap	Shift + Blue / Prime
PIP P.Swap	Shift + Yellow / YouTube /
PIP TV/AV	Shift + AV / Input / RDS

Originale	Sostituto
Hold	Stop / Hold
Subpage	Subtitle / EQ
Cancel	Shift + Exit / Cancel / Clear
TTX	Text / Goto
Reveal	D.Menu / Top
Size	Zoom / Size
Mix	Shift + Text /
Index	Info / Angle

