 








 
 
 
 


 







Originale	Sostituto
 Power	 Power
 A-B	 3D
 Clear	 Exit
 Open/Close	 Eject
 Time	 AV
 Resume	 Info
 Prog	 Sleep
 Audio	 Dual
 Subtitle	 Subt
 Zoom	 Shift + Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Originale	Sostituto
 8	 8
 9	 9
 0/10	 0
 10+	 Guide
 Ran	 TV/R
 OSD	 Format
 Return	 Back
 Repeat	 Text
 Slow	 Green
 Menu	 Menu
 Angle	 Red
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Surround	 Yellow
 L/R	 Smart
 Setup	 Options





Originale	Sostituto	Originale	Sostituto
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Stop	 Stop		
 Play	 Play		
 I<<	 I<<		
 >>I	 >>I		
 N/P	 Media		
 <<	 <<		
 >>	 >>		
 Pause/Step	 Pause		
 PBC	 D. Menu		
 Title	 List		

