





Originale	Sostituto
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Guide / EPG / -/--
	 Setup / OPT /
	 Picture / Format
	 AV / Input / RDS
	 Menu / Home
	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

Originale	Sostituto
	 Info / Angle
	 Shift + Setup / OPT / Tools
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Smart / List
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3





Originale		Sostituto	
4 GHI	4	4 VIDEO	4
5 JKL	5	5 TAPE	5
MNO 6	6	6 TUNER	6
7 PQRS	7	7 AUX - HDD	7
8 TUV	8	8 USB	8
WXYZ 9	9	9 BLUETOOTH	9
SUBTITLE	Subtitle	SUBTITLE EQ	Subtitle / EQ
0	0	0 HDMI - BAT	0
TEXT	Text	GOTO TEXT	Text / Goto

Originale		Sostituto	

