

 



 

 



 





 
 














 

 



 







 



 







 











Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Right	 Right
 Info	 Info / Angle	 Vol+	 Vol+
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 I<<	 I<< / Preset-	 Down	 Down
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 CH+	 CH+ / Page+	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Vol-	 Vol-	 7	 7
 Left	 Left	 8	 8
 OK	 OK	 9	 9







Originale	Sostituto
Standby	Power
Info	Info / Angle
Subtitle	Subtitle / EQ
Mute	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
<<	<< / Tune-
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Up / CH+	CH+ / Page+
Up / CH+	Up
Exit	Exit / Cancel / Clear
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK

Originale	Sostituto
Right / Vol+	Vol+
Right / Vol+	Right
Record	Rec / Rec Mode
Down / CH-	Down
Down / CH-	CH- / Page-
Stop	Stop / Hold
1	1
2	2
3	3
EPG	Guide / EPG / -/-
4	4
5	5
6	6
Back	Back / Return
7	7
8	8
9	9



