















 




 



 
 

 





 
 

 




 
 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Slow	 AV
 Mute	 Mute	 Menu	 Menu
 1	 1	 EPG	 Guide
 2	 2	 Exit	 Exit
 3	 3	 Zoom	 Smart
 4	 4	 Navi	 Media
 5	 5	 Play	 Play
 6	 6	 Pause	 Pause
 7	 7	 <<	 <<
 8	 8	 >>	 >>
 9	 9	 Rec	 Rec
 0	 0	 Stop	 Stop
 Info	 Info	 UP	 Up
 ADV	 Pre Ch	 Down	 Down
 Page+	 >>I	 Right	 Right
 Page-	 I<<	 Left	 Left
 Audio	 Dual	 OK	 Ok

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 PLAY	 PAUSE
 STOP	 <<	 >>	 >>
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 UP	 AV
 TOP MENU	 DISPLAY	 MENU	 INFO
 OK	 OK	 LEFT	 RIGHT
 EXIT	 RETURN	 BACK	
 VOL+	 HOME	 SMART	 CH+
 VOL-	 APP	 MEDIA	 CH-
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 GUIDE	 0	 FAV	 PRE-CH
 A	 B	 C	 D
 www.mandis.tv			



