

 




















 

 







 




| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  Mute |  Mute |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/-- |  GUIDE |
|  Recall |  RETURN BACK |
|  Vol+ |  + VOL |
|  Vol- |  VOL - |
|  Nicam |  SOUND DUAL |

| Originale | Sostituto |
|--|--|
|  Sleep |  PROG SLEEP |
|  Display |  DISPLAY INFO |
|  CH+ |  + CH |
|  CH- |  CH - |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Aspect |  PICTURE FORMAT |
|  Source |  TIMER AV |
|  P.Mode |  SHIFT + PICTURE FORMAT |
|  S.Mode |  SHIFT + SOUND DUAL |
|  Exit |  CLEAR EXIT |
|  Menu |  TOP MENU MENU |
|  Media |  APP MEDIA |
|  Play / Pause |  PLAY MODE |



