











 

 

 

 









 

 





 








 

 

 

 




















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P+	 Up
 1	 1	 V-	 Vol-
 2	 2	 V-	 Left
 3	 3	 Menu	 Menu / Home
 4	 4	 Menu	 OK
 5	 5	 V+	 Vol+
 6	 6	 V+	 Right
 7	 7	 P-	 CH- / Page-
 8	 8	 P-	 Down
 9	 9	 Tv	 TV/Radio /
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 0	 0	 Av	 AV / Input / RDS
 16:9	 Picture / Format	 Red	 Red / Netflix / Search
 S/M/D	 Display / Media	 Green	 Green / APP / Repeat
 PP	 Back / Return	 Yellow	 Yellow / YouTube / Repeat
 →←	 Smart / List	 Blue	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 ≡Text	 Text / Goto

Originale	Sostituto	Originale	Sostituto
 P+	 Up	 TV	 DVD
 V-	 Vol-	 S	 SAT
 V-	 Left	 PP	 AUX
 Menu	 Menu / Home	 S/M/D	 SLOW STEP-FREEZE
 Menu	 OK	 PP	 HOLD
 V+	 Vol+	 S	 REC MODE
 V+	 Right	 PP	 PRESET-
 P-	 CH- / Page-	 PP	 PRESET+
 P-	 Down	 PP	 TITLE
 Tv	 TV/Radio /	 PP	 LANG UI
 Exit	 Exit / Cancel / Clear	 PP	 EQ
 Av	 AV / Input / RDS	 PP	 SURROUND
 Red	 Red / Netflix / Search	 PP	 SOUND
 Green	 Green / APP / Repeat	 PP	 AUDIO
 Yellow	 Yellow / YouTube / Repeat	 PP	 SUBTITLE
 Blue	 Blue / Prime Video / Random	 PP	 TIMER
 ≡Text	 Text / Goto	 PP	 PROGRAM





Originale		Sostituto		Originale		Sostituto	
	/≡Mix		Audio / Lang I/II				
	≡☺Time Page		Subtitle / EQ				
	Info		Info / Angle				
	≡i		Guide / EPG / -/--				
	≡+		Fav / Marker / PC				
	≡◆		Setup / OPT /				
	≡x Cancel		Zoom / Size				
	≡? Reveal		D.Menu / Top				

