










Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 APP	 Shift + Green / APP /
 APP	 Display / Media
 0	 0
 Back	 Back / Return
 L-	 I<< / Preset-
 L+	 >>I / Preset+

Originale	Sostituto
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 CH+	 CH+ / Page+
 Down	 Down
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 Info	 Info / Angle
 List	 Smart / List
 EPG	 Guide / EPG / -/-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat





Originale	Sostituto	Originale	Sostituto
 Blue	 Blue / Prime Video / Random		
 Audio	 Audio / Lang I/II		
 Subt	 Subtitle / EQ		
 Text	 Text / Goto		
 Tv/Rad.	 TV/ Radio /		
 OPT	 Setup / OPT /		
 Still	 Pause / Step / Freeze		
 Tv/AV	 AV / Input / RDS		

Originale	Sostituto

