



 



















 



 







Originale	Sostituto
 Power	 Power
 TV / AV	 AV / Input / RDS
 TV/TXT	 Text / Goto
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Display / Media
 DTV	 D.Menu / Top
 Hold	 Stop / Hold
 Size	 Shift + Zoom /
 Subpage	 Eject / Surround
 Index	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH+	 CH+ / Page+
 Menu	 Menu / Home
 Vol+	 Vol+

Originale	Sostituto
 CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Originale		Sostituto		Originale		Sostituto	
	.		TV/Radio /		Quick Start		Setup / OPT /
	0		0				
	Recall		Back / Return				
	Picture		Picture / Format				
	Sound		Sound / Title				
	I/II		Audio / Lang I/II				
	Mute		Mute / Dimmer				
	Sleep		Sleep / Timer				
	Info		Info / Angle				
	Zoom		Zoom / Size				
	Freeze		Pause / Step / Freeze				
	EPG		Guide / EPG / -/--				
	FAV List		Fav / Marker / PC				
	FAV ADD		I<< / Preset-				
	FAV >>I		>>I / Preset+				
	Subtitle		Subtitle / EQ				
	Time		Shift + Sleep / Timer				

