




























 


 





Originale	Sostituto
 Power	 Power
 Eject	 Eject
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 TV/TXT /	 Shift + Text
 TV/TXT /	 List
 Cancel / Zoom	 Shift + Exit
 Reveal / Subtitle	 Shift + Subt
 Hold / Menu	 Shift + Stop
 Hold / Menu	 D. Menu
 Size / Angle	 3D
 Subpage / Title	 Shift + List

Originale	Sostituto
 Index / Goto	 Info
 Red / Program	 Red
 Green / Slow	 Green
 Yellow / Repeat	 Yellow
 Blue / A-B	 Blue
 CH +	 Ch +
 CH -	 Ch -
 Sys-Menu	 Menu
 Input	 AV
 Vol +	 Vol +
 Vol -	 Vol -
 DVD	 Media
 DVD-Setup	 Options
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right





Originale	Sostituto
 Down	 Down
 DVB	 Smart
 Sys-Exit	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Picture	 Shift + Format
 Sound	 Shift + Dual

Originale	Sostituto
 Nicam / A2	 Shift + Mute
 Mute	 Mute
 Sleep	 Sleep
 TV / Radio	 TV/R
 FAV	 Pre Ch
 Fav +	 Shift + Right
 Fav -	 Shift + Left
 Pic. Format	 Format
 Subtitle	 Subt
 Text	 Text
 Display	 Shift + Info
 Language	 Dual
 EPG	 Guide

