



Originale	Sostituto
Power	Power
TXT	Text / Goto
MIX	Smart / List
Size	Zoom / Size
Index	Info / Angle
Hold	Shift + Stop /
Reveal	D.Menu / Top
Subcode	Display / Media
Cancel	Shift + Exit / Cancel / Clear
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Originale	Sostituto
9	9
Timer	Sleep / Timer
0	0
Recall	Back / Return
Red/P.M.	Red / Netflix / Search
CH+	CH+ / Page+
Vol+	Vol+
Yellow/Sleep	Yellow / YouTube / Repeat
Green/S.M.	Green / APP / Repeat
CH-	CH- / Page-
Vol-	Vol-
Blue/Call	Blue / Prime Video / Random
Menu	Menu / Home
Up	Up
Source	AV / Input / RDS
Left	Left
Select	OK





Originale	Sostituto
	Right
	Exit / Cancel / Clear
	Down
	Mute / Dimmer
	Picture / Format
	Setup / OPT /
	Subtitle / EQ
	Fav / Marker / PC
	TV/Radio /
	Guide / EPG / -/--
	Audio / Lang I/II
	Sound / Title
	Shift + 2
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Eject / Surround

Originale	Sostituto
	I<< / Preset-
	<< / Tune-
	>> / Tune+
	>>I / Preset+

