


















 







 


















 

































Originale		Sostituto		Originale		Sostituto	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / -/--		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang / I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8




















 







 










 









 

 


 


 
 
 

 





 





Originale		Sostituto		Originale		Sostituto	
	9		9				
	Menu		Menu / Home				
	Help		Text / Goto				
	0		0				





Originale		Sostituto		Originale		Sostituto	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / -/--		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang / I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8





Originale

Sostituto




























 

































 


 



9 wxyz	9	9 BLUETOOTH	9
MENU	Menu	HOME MENU	Menu / Home
HELP	Help	GOTO TEXT	Text / Goto
0 -	0	HDMI - BAT 0	0

Originale

Sostituto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / -/--		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang / I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8





Originale

Sostituto




























 

































 


 



9 wxyz	9	BLUETOOTH 9	9
MENU	Menu	HOME MENU	Menu / Home
HELP	Help	GOTO TEXT	Text / Goto
0 _	0	HDMI - SAT 0	0

Originale

Sostituto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / -/--		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang / I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8





Originale		Sostituto		Originale		Sostituto	
	9		9				
	Menu		Menu / Home				
	Help		Text / Goto				
	0		0				

