








 

 













Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Media	 Shift + Media / Display / Media
 Aspect	 Zoom / Size
 PMode	 Picture / Format
 SMode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Originale	Sostituto
 Recall	 Back / Return
 Display	 Display / Media
 Eject	 Eject / Surround
 Rec	 Rec / Rec Mode
 Red/Program	 Red / Netflix / Search
 Green/Info	 Green / APP / Repeat
 Yellow/Goto	 Yellow / YouTube / Repeat
 Blue/AB	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit/DVD Setup	 Exit / Cancel / Clear





Originale	Sostituto
 CH+ / Page+	 CH+ / Page+
 Subtitle	 Subtitle / EQ
 Vol+	 Vol+
 CH-	 CH- / Page-
 T.Shift/Angle	 Info / Angle
 Vol-	 Vol-
 Play/Hold	 Play / Slow
 Pause	 Pause / Step / Freeze
 <</Reveal	 << / Tune-
 >>/Size	 >> / Tune+
 Stop/Index	 Stop / Hold
 I<<	 I<< / Preset-
 >>/S.Page	 >>I / Preset+
 Text/Zoom	 Text / Goto
 FAV/DVD Menu	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 DTV	 D.Menu / Top

Originale	Sostituto
 EPG/Title	 Guide / EPG / -/--
 Tv/Radio	 TV/Radio /

