



Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 DVD	 Red
 Tuner	 Green
 Video	 Yellow
 TV/AUX	 Blue
 Sleep	 Sleep
 I<<	 I<<
 <<	 <<
 >>	 >>
 >>I	 >>I
 Play	 Play
 Stop	 Stop
 SP.Setup	 Media
 CH-Level	 Guide
 SR.Mode	 List
 Title	 Info

Originale	Sostituto
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Setup	 Options
 Pause/Step	 Pause
 Menu/Return	 Menu
 Goto Auto	 Back
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Originale	Sostituto	
	6		6
	7		7
	8		8
	9		9
	0		0
	DISP/FM mode		TV/R
	Delay Time		Exit
	Test Tone		Format
	Subtitle		Subt
	Slow		AV
	Audio		Dual
	A-B		Smart
	Zoom		Shift + Eject
	Angle		3D
	Random		D. Menu
	Repeat		Text
	Digest RDS		Shift + Subt

	Originale	Sostituto	
	MPX PTY Search		Shift + AV
	PBC		Shift + TV/R

