


Originale	Sostituto
 POWER	 Power
 Open / Close	 Eject
 MUTE	 Mute
 DVD / TV Sys	 Smart
 VIDEO	 Media
 TUNER	 Shift + Media
 I<<	 I<<
 <<	 <<
 >>	 >>
 >>	 >>
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play	 Play
 STOP	 Stop

Originale	Sostituto
 VOL+	 Vol +
 VOL-	 Vol -
 SETUP	 Options
 PAUSE / Step	 Pause
 Menu/Return	 Menu
 Menu / Return	 Back
 GOTO / Auto	 Guide
 PROGRESSIVE	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

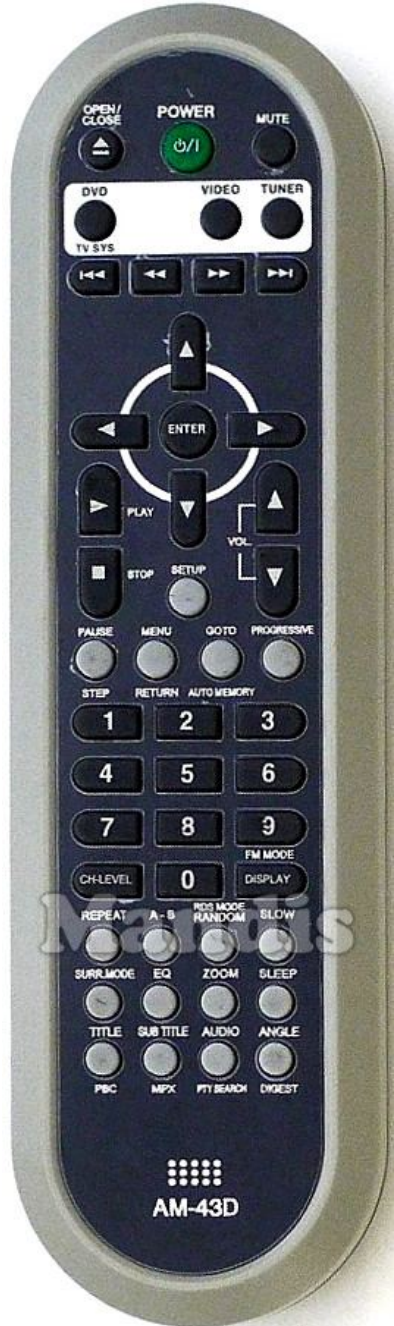



Originale		Sostituto	
	0		0
	CH-LEVEL		TV/R
	Display / FM Mode		Info
	REPEAT		Text
	A-B	+	Shift + Play
	RANDOM / RDS		List
	SLOW		Ch -
	SURR. MODE		3D
	EQ		Dual
	Zoom	+	Shift + Eject
	SLEEP		Sleep
	Title / PBC		D. Menu
	SUB TITLE/MPX		Subt
	AUDIO / PTY	+	Shift + Dual
	ANGLE		Format

Originale	Sostituto

