



Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Still	 Pause
 TV / Input	 AV
 Multimedia	 Media
 Zoom -	 Shift + Down
 Zoom +	 Shift + Up

Originale	Sostituto
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 Menu	 Menu
 Menu	 Ok
 Prev PR	 Pre Ch
 Screen Size	 3D
 Mute	 Mute
 Sleep	 Sleep
 [≡]	 Text
 [≡?]	 Smart
 [≡X]	 Exit



 

 









 
Originale		Sostituto	
	[≡↓]		Eject
	[≡●]		TV/R
	[≡□]		Stop
	Pic Mode / [≡]		Format
	Sound Mode / [≡i]		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / I-II		Blue
	Blue / I-II		Shift + Dual

Originale		Sostituto	





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Menu	 Ok
 1	 1	 << FR / Slow	 <<
 2	 2	 Play	 Play
 3	 3	 >> FF / Slow	 >>
 4	 4	 Stop	 Stop
 5	 5	 I<< Prev	 I<<
 6	 6	 Open / Close	 Eject
 7	 7	 >>I Next	 >>I
 8	 8	 Pause	 Pause
 9	 9		
 0	 0		
 TV / Input	 AV		
 Up / PR +	 Up		
 Up / PR +	 Ch +		
 Down / PR -	 Down		
 Down / PR -	 Ch -		
 Menu	 Menu		

Originale	Sostituto	Originale	Sostituto
 Menu	 Ok	 << FR / Slow	 <<
 Play	 Play	 >> FF / Slow	 >>
 Stop	 Stop	 I<< Prev	 I<<
 Open / Close	 Eject	 >>I Next	 >>I
 Pause	 Pause		





Originale	Sostituto	Originale	Sostituto
Power	Power	Red	Red
1	1	Green	Green
2	2	Yellow	Yellow
3	3	Blue / I-II	Blue
4	4	Blue / I-II	Dual
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
Up / PR +	Up		
Up / PR +	Ch +		
Down / PR -	Down		
Menu	Ok		
Down / PR -	Ch -		
Menu	Menu		

Originale	Sostituto	Originale	Sostituto
Red	Red		
Green	Green		
Yellow	Yellow		
Blue / I-II	Blue		
Blue / I-II	Dual		

