

 
 
 
 

 
 



 
 

 


 








 

 


 





Originale	Sostituto
 Power	 Power
 Open / Close	 Eject
 VCR	 Media
 DVD	 Smart
 Input	 AV
 1 / Tracking -	 1
 2	 2
 3 / Tracking +	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P.Scan	 Pre Ch
 Clear	 Exit

Originale	Sostituto
 Menu	 Menu
 Setup	 Options
 Up / PR+	 Up
 Up / PR+	 Ch +
 Down / PR-	 Down
 Down / PR-	 Ch -
 Right	 Right
 Left	 Left
 Enter	 Ok
 Skip	 Back
 Display	 Info
 Subtitle	 Subt
 Audio	 Dual
 Edit	 Guide
 Zoom	 Shift + Eject
 Play/Pause	 Pause
 << REW	 <<





Originale		Sostituto	
	Play/Pause		Play
	FF >>		>>
	I<< Prev		I<<
	Stop		Stop
	Next >>I		>>I
	Rec		Rec
	Rec Mode		Shift + Rec
	Title		List
	Slow -		Vol -
	Slow +		Vol +
	Angle		Format
	TV / VCR		TV/R
	Repeat		Text
	A-B		Shift + Text
	Timer		Shift + AV

Originale	Sostituto

