


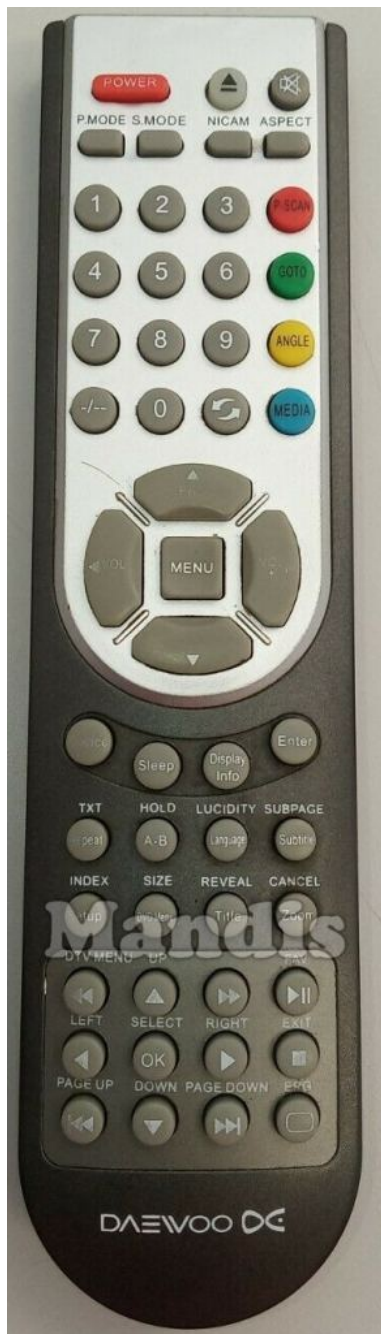

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Recall	 Shift + Guide
 DVD	 Eject	 Red / DVD P.Scan	 Back
 Mute	 Mute	 Green / DVD Goto	 Red
 PMode	 Shift + Format	 Yellow / DVD	 Green
 SMode	 Shift + Dual	 Blue / DVD Media	 Yellow
 Nicam	 Dual	 Blue / DVD Media	 Blue
 Aspect	 Format	 Blue / DVD Media	 Media
 1	 1	 PR+ / Up	 Ch +
 2	 2	 PR+ / Up	 Shift + Up
 3	 3	 PR- / Down	 Ch -
 4	 4	 PR- / Down	 Shift + Down
 5	 5	 Vol+ / Right	 Vol +
 6	 6	 Vol+ / Right	 Shift + Right
 7	 7	 Vol- / Left	 Vol -
 8	 8	 Vol- / Left	 Shift + Left
 9	 9	 Menu	 Menu
 0	 0	 Source	 AV

Originale	Sostituto	Originale	Sostituto
 Recall	 Shift + Guide	 Red / DVD P.Scan	 Back
 Green / DVD Goto	 Green	 Yellow / DVD	 Yellow
 Blue / DVD Media	 Blue	 Blue / DVD Media	 Media
 PR+ / Up	 Ch +	 PR+ / Up	 Shift + Up
 PR- / Down	 Ch -	 PR- / Down	 Shift + Down
 Vol+ / Right	 Vol +	 Vol+ / Right	 Shift + Right
 Vol- / Left	 Vol -	 Vol- / Left	 Shift + Left
 Menu	 Menu	 Source	 AV





Originale	Sostituto
Sleep	Sleep
Display Info	Info
Enter	Shift + Ok
TXT / DVD Repeat	Text
Hold / DVD A-B	TV/R
Lucidity / DVD Language	Options
Subpage / DVD Subtitle	Subt
Index / DVD Setup	Smart
Size / DVD	Shift + D. Menu
Reveal / DVD Title	List
Cancel / DVD	Shift + Eject
DTV Menu / DVD	D. Menu
DTV Menu / DVD	<<
DVD >>	>>
FAV / DVD Play/Pause	Pre Ch
FAV / DVD Play/Pause	Play
FAV / DVD Play/Pause	Pause

Originale	Sostituto
Exit / DVD Stop	Exit
Exit / DVD Stop	Stop
Page Up / DVD	Shift + Ch +
Page Down / DVD	Shift + Ch -
Up	Up
Left	Left
OK / DVD Select	Ok
Right	Right
Down	Down
EPG / DVD □	Guide

