





















Originale	Sostituto
Power	Power
TV	Shift + 1
DVD	Shift + 2
Scart	Shift + 3
VGA	Shift + 4
P.M.	Picture / Format
S.M.	Sound / Title
Set Fav	Shift + Fav / Marker / PC
Display	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Originale	Sostituto
9	9
0	0
Fav	Fav / Marker / PC
Recall / +10	Back / Return
Stereo / Audio	Audio / Lang I/II
Vol+	Vol+
CH+	CH+ / Page+
Scan	Smart / List
Mute	Mute / Dimmer
Vol-	Vol-
CH-	CH- / Page-
Subtitle	Subtitle / EQ
Exit	Exit / Cancel / Clear
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK





Originale	Sostituto
 Right	 Right
 Source	 AV / Input / RDS
 Down	 Down
 Sleep	 Sleep / Timer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Open / Close	 Eject / Surround
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / >>>	 Green / APP / Repeat
 Green / >>>	 >>> / Tune+
 Yellow / <<<	 Yellow / YouTube / Repeat
 Yellow / <<<	 <<< / Preset-
 Blue / >>>	 Blue / Prime Video / Random
 Blue / >>>	 >>> / Preset+
 Title / Text	 Text / Goto

Originale	Sostituto
 Menu / [≡X]	 D.Menu / Top
 Angle / [≡◆]	 Info / Angle
 Angle / [≡◆]	 Zoom / Size
 Repeat / [≡□]	 Shift + Stop /
 Repeat / [≡□]	 Shift + Green / APP /
 Set Up / [≡i]	 Setup / OPT /
 Slow / [≡?]	 Shift + Play /
 Goto / [≡⊖]	 Shift + Text /
 Card / [≡...]	 TV/Radio /

