



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Pause	 Pause / Step / Freeze
 1	 1	 <<	 << / Tune-
 2	 2	 Play	 Play / Slow
 3	 3	 >>	 >> / Tune+
 TV / VCR	 TV/Radio /	 Stop	 Stop / Hold
 4	 4	 Rec	 Rec / Rec Mode
 5	 5	 Eject	 Eject / Surround
 6	 6	 SP / LP	 Zoom / Size
 AV	 AV / Input / RDS	 I>	 Guide / EPG / -/--
 7	 7	 Up / PR+	 Up
 8	 8	 Up / PR+	 CH+ / Page+
 9	 9	 Menu	 Menu / Home
 [A]	 Red / Netflix / Search	 PAL / SEC	 Picture / Format
 >>30	 Fav / Marker / PC	 Left	 Left
 0	 0	 OK	 OK
 A.D	 Subtitle / EQ	 Right	 Right
 Q.S	 Display / Media	 Index-	 I<< / Preset-

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Pause	 Pause / Step / Freeze
 1	 1	 <<	 << / Tune-
 2	 2	 Play	 Play / Slow
 3	 3	 >>	 >> / Tune+
 TV / VCR	 TV/Radio /	 Stop	 Stop / Hold
 4	 4	 Rec	 Rec / Rec Mode
 5	 5	 Eject	 Eject / Surround
 6	 6	 SP / LP	 Zoom / Size
 AV	 AV / Input / RDS	 I>	 Guide / EPG / -/--
 7	 7	 Up / PR+	 Up
8	8	Up / PR+	CH+ / Page+
9	9	Menu	Menu / Home
[A]	Red / Netflix / Search	PAL / SEC	Picture / Format
>>30	Fav / Marker / PC	Left	Left
0	0	OK	OK
A.D	Subtitle / EQ	Right	Right
Q.S	Display / Media	Index-	I<< / Preset-





Originale		Sostituto		Originale	Sostituto
	Index+		>>I / Preset+		
	Down / PR-		Down		
	Down / PR-		CH- / Page-		
	A.SEL		Smart / List		

