







 




















 



 

 















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Eject/Tv Audio	 Eject / Surround
 4	 4
 5	 5
 6	 6
 Recall/Goto	 Shift + Text /
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up

Originale	Sostituto
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 DVD Menu	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Vol-	 Vol-
 Pic	 Picture / Format
 CH+	 CH+ / Page+
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 DVD Setup	 Setup / OPT /
 Back/Tv/Radio	 Shift + Back / Return
 Text	 Text / Goto





	Originale	Sostituto	
	EPG	 Guide / EPG / -/--	
	Play	 Play / Slow	
	Pause	 Pause / Step / Freeze	
	Stop	 Stop / Hold	
	FAV	 Fav / Marker / PC	
	Info	 Info / Angle	
	Red/DVD/USB	 Red / Netflix / Search	
	Green/Title	 Green / APP / Repeat	
	Yellow/PBC	 Yellow / YouTube / Repeat	
	Blue/Angle	 Blue / Prime Video / Random	
	<<	 << / Tune-	
	>>	 >> / Tune+	
	I<<	 I<< / Preset-	
	>>I	 >>I / Preset+	
	Return	 Back / Return	
	Display	 Display / Media	
	DVD Audio	 Audio / Lang I/II	

	Originale	Sostituto	
	Subtitle	 Subtitle / EQ	
	Reveal	 Shift + Exit / Cancel / Clear	
	Hold	 Shift + Stop /	
	List	 Smart / List	
	Index	 TV/Radio /	
	Subpage	 Shift + Smart / List	
	Size	 Zoom / Size	
	Mix	 Shift + Display / Media	
	Freeze	 Shift + Pause / Step /	

