





 
 



 

 















 
 

 
 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ASPECT	 Format
 P.C.	 Pre Ch
 MENU	 Menu
 SOURCE	 Shift + AV
 Up	 Up

Originale	Sostituto
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 CH +	 Ch +
 CH -	 Ch -
 Sound	 Dual
 PIC	 Shift + Format
 NICAM	 Media
 SLEEP	 Sleep
 TV	 Smart
 AV	 AV
 HDMI	 Shift + Media





Originale	Sostituto	Originale	Sostituto
SCART1	AD SUBT Subt		
Y.Pb.Pr	SHIFT + AD SUBT Shift + Subt		
RECALL	RETURN BACK Back		
Red	A Red		
Green	B Green		
Yellow	C Yellow		
Blue	D Blue		
REVEAL	PLAY MODE Play		
HOLD	Pause		
LIST	DISC NAV LIST List		
INDEX	Stop		
SUBPAGE	REC MODE Rec		
SIZE	ECO 3D 3D		
AUTO	-/-- GUIDE Guide		
TEXT	REPEAT TEXT Text		

