





 
 



 

 















 
 

 
 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ASPECT	 Format
 P.C.	 Pre Ch
 MENU	 Menu
 SOURCE	 Shift + AV
 Up	 Up

Originale	Sostituto
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 CH +	 Ch +
 CH -	 Ch -
 Sound	 Dual
 PIC	 Shift + Format
 NICAM	 Media
 SLEEP	 Sleep
 TV	 Smart
 AV	 AV
 HDMI	 Shift + Media





Originale		Sostituto		Originale	Sostituto
SCART1	SCART1		Subt		
Y.Pb.Pr	Y.PB.PR		Shift + Subt		
RECALL	RECALL		Back		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
REVEAL	Reveal		Play		
HOLD	Hold		Pause		
LIST	List		List		
INDEX	Index		Stop		
SUBPAGE	Subpage		Rec		
SIZE	Size		3D		
AUTO	Auto		Guide		
TEXT	Text		Text		

