 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Source	 AV
 P Mode	 Format
 S Mode	 Shift + Dual
 Audio I / II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / 10	 0

Originale	Sostituto
 -/-- / +10	 Shift + Guide
 Recall / Program	 Back
 TV Menu	 Menu
 Exit	 Exit
 Goto / Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK / Enter	 Ok
 V -	 Vol -
 V +	 Vol +
 P -	 Ch -
 P +	 Ch +
 Red / DVD	 Red
 Green / A-B	 Green





Originale	Sostituto	Originale	Sostituto
 Yellow / Angle	 Yellow		
 Blue / Repeat	 Blue		
 Subtitle	 Subt		
 Play / Pause /	 Play		
 Size	 3D		
 D.Dis / Reveal	 Smart		
 D.Menu / Mix	 D. Menu		
 Zoom / Index	 Shift + Eject		
 I<< / Fav	 I<<		
 I<< / Fav	 Pre Ch		
 >>I / Subpage	 >>I		
 Stop / Language	 Stop		
 << / Fav -	 <<		
 >> / Fav +	 >>		
 Eject / EPG	 Guide		
 Eject / EPG	 Eject		

Originale	Sostituto

