


 



 








 








 


 

 

 

 

 


 








Originale	Sostituto
 PP	 Back / Return
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 P<P	 Fav / Marker / PC
 0	 0
 --	 Guide / EPG / --
 Menu [M]	 Menu / Home
 Info [i]	 Info / Angle
 I-II	 Audio / Lang I/II

Originale	Sostituto
 Mute	 Mute / Dimmer
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 V -	 Vol-
 V +	 Vol+
 P -	 CH- / Page-
 P +	 CH+ / Page+
 Red / Sound	 Red / Netflix / Search
 Red / Sound	 Sound / Title
 Green / Picture	 Green / APP / Repeat
 Green / Picture	 Picture / Format
 Yellow / Feature	 Yellow / YouTube / Repeat
 Blue / Install	 Blue / Prime Video / Random
 Text	 Text / Goto





Originale	Sostituto
[≡o]	TIMER SLEEP Sleep / Timer
Hold	HOLD Stop / Hold
[≡X]	CLEAR EXIT CANCEL Exit / Cancel / Clear
Mix / PIP Swap	LIST SMART Smart / List
PIP / Size	SIZE ZOOM Zoom / Size
PIP Down / [≡?]	PRESET- I<< / Preset-
PIP Up / Index	PRESET+ >>I / Preset+
[TV]	PROGRAM TV/RADIO TV/ Radio /
[AV]	RDS AV INPUT AV / Input / RDS

Originale	Sostituto

