



| Originale | | Sostituto | |
|---|-----------|---|--------|
|  | Power |  | Power |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | SDB Tone |  | Smart |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | <</Tune- |  | << |
|  | >>/Tune+ |  | >> |
|  | Analog In |  | Red |
|  | Tuner |  | Green |
|  | CD |  | Yellow |

| Originale | | Sostituto | |
|---|---------------|---|---------|
|  | Digital In |  | Blue |
|  | iPod/USB |  | Media |
|  | Enter |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Folder Mode |  | Back |
|  | Setup |  | Options |
|  | Remote/Browse |  | Pre Ch |
|  | Repeat |  | Text |
|  | Info |  | Info |
|  | DAB/RDS |  | TV/R |
|  | Program |  | D. Menu |
|  | Random |  | Subt |
|  | Clear |  | Exit |
|  | 1 |  | 1 |



