





 
 
 



 


 
 

 
 



 

 
 



 



 



 

 
 






 



 

 

 

 

 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Channel -		Ch -
	Quick Select 1		1		Tune +		>>
	Quick Select 2		2		Tune -		<<
	Quick Select 3		3		Mute		Mute
	Quick Select 4		4		CH Level		3D
	CBL/SAT		5		Sleep		Sleep
	DVD		6		Dimmer		Text
	Blu-ray		7		Search		TV/R
	Game		8		Info		Info
	AUX		9		Audio		Dual
	Tv Audio		Guide		Back		Back
	Tuner		0		Setup		Menu
	Memory		Pre Ch		Vol+		Vol +
	Band		List		Vol-		Vol -
	Shift		AV		Up		Up
	Mode		Exit		Down		Down
	Channel +		Ch +		Right		Right





Originale	Sostituto	Originale	Sostituto
 Left	 Left		
 Enter	 Ok		
 Night	 Options		
 Restorer	 Eject		
 Tone	 D. Menu		
 < Surround	 Yellow		
 Surround >	 Blue		
 Audio Delay +	 >>		
 Audio Delay -	 <<		

