

 


Originale	Sostituto	Originale	Sostituto
Power	Power	Page Up	>>
Eco	3D	Page Down	<<
Sleep	Sleep	Green/Movie	Green
CBL/SAT	1	Red/Music	Red
DVD/Blu-ray	2	Blue/Game	Blue
Blu-ray	3	Yellow/Pure	Yellow
Game	4	Info	Info
AUX	5	Option	Options
Media Player	6	Back	Back
iPod/USB	7	Setup	Menu
Tv Audio	8	Up	Up
Tuner	9	Down	Down
Online Music	Guide	Right	Right
Bluetooth	0	Left	Left
Internet Radio	Pre Ch	Enter	Ok
Channel+	Ch +	Vol+	Vol +
Channel-	Ch -	Vol-	Vol -

Originale	Sostituto	Originale	Sostituto
Page Up	>>	Page Down	<<
Green/Movie	Green	Red/Music	Red
Blue/Game	Blue	Yellow/Pure	Yellow
Info	Info	Option	Options
Back	Back	Setup	Menu
Up	Up	Down	Down
Right	Right	Left	Left
Enter	Ok	Vol+	Vol +
Vol-	Vol -		





	Originale	Sostituto		Sostituto
	Mute		Mute	Mute
	>> /Tune+		>>	>>
	<</Tune-		<<	<<
	Play		Play	Play
	Pause		Pause	Pause
	Quick Select 1		Shift + 1	Shift + 1
	Quick Select 2		Shift + 2	Shift + 2
	Quick Select 3		Shift + 3	Shift + 3
	Quick Select 4		Shift + 4	Shift + 4
	Power Zone 2		Shift + Power	Shift + Power
	Source Zone 2		AV	AV
	Vol+ Zone 2		Shift + Vol +	Shift + Vol +
	Vol- Zone 2		Shift + Vol -	Shift + Vol -

	Originale	Sostituto		Sostituto

