





 


 

 

 

 

 

 

 



 

 



 

 




Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Dimmer	 Guide
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Repeat A-B	 3D
 Repeat	 Text
 Random	 Media

Originale	Sostituto
 Zoom	 Shift + Eject
 Clear	 Exit
 Search Mode	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Top Menu	 Shift + Menu
 Menu/Pop Menu	 Menu
 Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Angle	 AV





 
 
 
 









 





 






 
 






Originale		Sostituto		Originale		Sostituto	
	Subtitle		Subt				
	Audio		Dual				
	Pure Direct		Format				
	Display		Info				
	Mode		Smart				
	I<< Skip		I<<				
	Skip >>I		>>I				
	Stop		Stop				
	Play		Play				
	<<		<<				
	>>		>>				
	Still/Pause		Pause				





Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Dimmer	 Guide
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Repeat	 Text
 Random	 Media
 Zoom	 Shift + Eject

Originale	Sostituto
 Repeat A-B	 3D
 Clear	 Exit
 Search Mode	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Top Menu	 Shift + Menu
 Pop Up	 Menu
 Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Subtitle	 Subt





Originale		Sostituto		Originale		Sostituto	
	Audio		Dual				
	Angle		AV				
	Pure Direct		Format				
	Display		Info				
	Mode		Smart				
	I<< Skip		I<<				
	Skip >>I		>>I				
	Stop		Stop				
	Play		Play				
	Still/Pause		Pause				
	<<		<<				
	>>		>>				

