 

 


 

 
 

 
 
 

 
 
 
 
 
 
 
 
 
 


 
 


 
 
 
 
 
 




Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Search	 TV/R
 Prog/Direct	 Sleep
 Clear	 Exit
 Call	 Pre Ch

Originale	Sostituto
 Dimmer	 Shift + Info
 YouTube	 Media
 Netflix	 Shift + Smart
 Vidu	 Shift + Media
 Info	 Info
 Home	 Smart
 Power AMP	 Shift + Power
 Source Up	 Ch +
 Source Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 Menu
 Pop Up Menu	 D. Menu
 Return	 Back
 Setup	 Shift + Options
 Up	 Up





Originale	Sostituto
Down	Down
Right	Right
Left	Left
Enter	Ok
<<	<<
Play	Play
>>	>>
I<<	I<<
Pause	Pause
Stop	Stop
>>I	>>I
Repeat	Text
A-B	Shift + Back
Random	AV
Pure	Format
Subtitle	Subt
Angle	List

Originale	Sostituto
Audio	Dual
Option	Options
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Video Resolution	3D
DVD a Page	Shift + AV
Disc Layer	Shift + Format
Picture Adjust	Shift + 3D

