


 

 
 

 

 















 
 

 

 















 








 
 

 
 

 
 
 





 

Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 Net/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Shift + Pre Ch
 DVR	 Blue

Originale	Sostituto
 TV	 Shift + Media
 Monitor Select	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source Select	 AV
 Menu	 Menu
 CH Level/Top	 Info
 Search/Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down





 

 
 
 
 















 










Originale	Sostituto
 Right	 Right
 Left	 Left
 Enter	 Ok
 <</Band	 <<
 Play	 Play
 >>/Mode	 >>
 I<</Tuning-	 I<<
 Pause	 Pause
 Stop	 Stop
 >>I/Tuning+	 >>I
 Multeq	 Subt
 Dyn EQ/Vol	 Text
 A-DSX	 TV/R
 Restorer	 Exit
 Standard	 Dual
 D/ST	 Format
 Simulation	 3D

Originale	Sostituto
 Pure	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/Memory	 Guide
 Shift/Link Menu	 D. Menu
 Power Tv	 Shift + TV/R
 Input Tv	 Shift + AV
 Sleep	 Sleep
 Party	 List





 


 


 


 






 
 




 



 

 


 


Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 Net/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Pre Ch
 DVR	 Blue

Originale	Sostituto
 TV	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu
 CH Level/Top	 Info
 Search/Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left






 

 
 
 














 
 

 

 
 




Originale	Sostituto	Originale	Sostituto
	Enter		Ok
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning-		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning+		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originale	Sostituto	Originale	Sostituto
	0		0
	+10/Memory		Guide
	Shift/Link Menu		D. Menu
	Power Tv		TV/R
	Input TV		AV
	Sleep		Sleep
	Party		List





Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 Net/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Pre Ch
 DVR	 Blue

Originale	Sostituto
 TV	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu
 CH Level/Top	 Info
 Search/Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left






Originale	Sostituto
Enter	Ok
<</Band	<<
Play	Play
>>/Mode	>>
l<</Tuning-	l<<
Pause	Pause
Stop	Stop
>>l/Tuning+	>>l
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Originale	Sostituto
0	0
+10/Memory	Guide
Shift/Link Menu	D. Menu
Power Tv	TV/R
Input Tv	AV
Party	List
Sleep	Sleep





 

 
 
 

 



 

 
 

 





 

 



 



Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 NET/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Pre Ch
 DVR	 Blue

Originale	Sostituto
 TV	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Search/Setup	 Options
 <</Band	 <<
 Play	 Play
 >>/Mode	 >>
 I<</Tuning-	 I<<
 Pause	 Pause
 Stop	 Stop
 >>I/Tuning+	 >>I





	Originale	Sostituto	Originale	Sostituto
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	+10/Memory			
	Power Tv			
	Shift/Link Menu			
	Input Tv			
	Sleep			
	Party	