 








 
 
 

 



 
 

















 

 

 
 




 

 
 
 


 




 


 

 



 




Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 Media Player	 2
 Blu-ray	 3
 Game	 4
 AUX1	 5
 AUX2	 6
 Phono	 7
 TV Audio	 8
 Tuner	 9
 USB	 Guide
 Bluetooth	 0
 Internet Radio	 Pre Ch
 Micro	 Smart
 CH/Page Up	 Ch +
 CH/Page Down	 Ch -

Originale	Sostituto
 Eco	 3D
 Volume Up	 Vol +
 Volume Down	 Vol -
 Mute	 Mute
 Info	 Info
 Option	 Options
 Back	 Back
 Setup	 Menu
 Play	 Play
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<</Tune-	 I<<
 Pause	 Pause
 >>I/Tune+	 >>I





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Volume Up		Vol +
	Sleep		Sleep		Volume Down		Vol -
	CBL/SAT		1		Mute		Mute
	Media Player		2		Up		Up
	Blu-ray		3		Down		Down
	Game		4		Right		Right
	AUX1		5		Left		Left
	AUX2		6		Enter		Ok
	Phono		7		Back		Back
	TV Audio		8		I<</Tune-		I<<
	Tuner		9		Play		Play
	USB		Guide		Pause		Pause
	Bluetooth		0		>>I/Tune+		>>I
	Internet Radio		Pre Ch		Quick Select 1		D. Menu
	Micro		Smart		Quick Select 2		Text
	CH/Page Up		Ch +		Quick Select 3		Eject
	CH/Page Down		Ch -		Quick Select 4		AV

